



EX362D

Class-A Stereo Integrated Amplifier

 
OWNER'S MANUAL
MODE D'EMPLOI
MANUEL DEL USUARIO
BEDIENUNGSANLEITUNG

ENGLISH

FRANCAIS

SPANISH

DEUTSCH

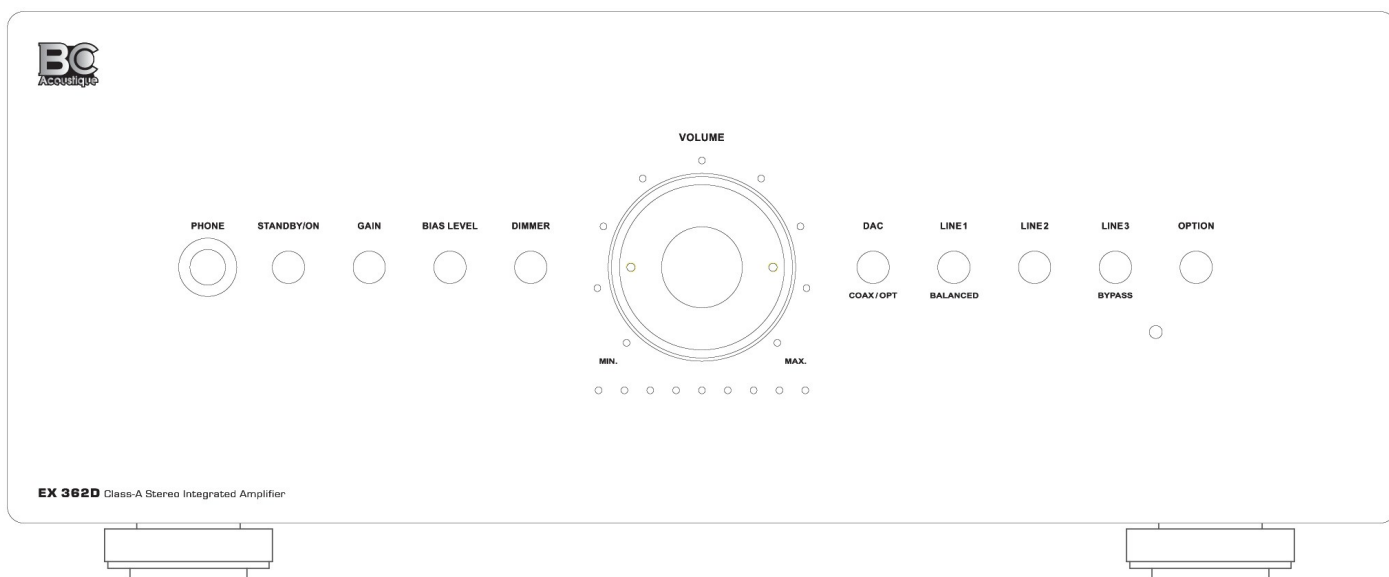

Dear Customer,

Thank you for choosing a BC Acoustique product. Its implementation has been our know-how, both in terms of design to the manufacturing. Electronic components and mechanical parts correspond to the selection criteria of very high quality. Operation and finish of each product have been checked before delivery. To obtain best results, please read the advice contained in this document.

Summary


Safety Instructions	02
Glossary	02
Recommandations	02
Recycling product	03
Location and precautions	03
Power Sources	03
Warranty	03
Basic Instructions: QUICK START	04
Rear panel - Connecting the amplifier	04
Under the amplifier- Switch anti-hum (Ground On/Off) ...	06
Front panel - Connections and use the amplifier	06
Remote Control	08
Specifications	09
Troubleshooting	09

Safety instructions

We invite you to read the instructions on the proper use of your product carefully. They will ensure the proper functioning of the latter and it safely.

- Do not use this device in a wet area or near water.
- Clean only with a dry cloth. As a precaution it is best to unplug the unit before handling.
- Never cover the ventilation of the unit. Be sure to install the unit in a well ventilated location.
- Do not install near heat sources.
- Take great care of the power cord and plugs electrical connection. In particular, do not walk, or press the power cord, specifically at plugs, power plant and the output of the power supply.
- Use only parts and accessories recommended by BC Acoustique.
- Be sure to use an appropriate power supply to the power jack on the unit outlet. Especially if the device is equipped with a ground, it is necessary to use it.
- Unplug the apparatus during lightning storms or when not in use for a long time.

Glossary

 The CE mark indicates that this product complies with European directives called "low voltage" (2006/95/EC), Electromagnetic Compatibility (2004/108/EC) and apply eco-design requirements for energy products (2009/125/EC) when the appliance is installed and used in accordance with the user manual. For continued compliance only BC Acoustique accessories must be used with this product and servicing must be performed by specialized and qualified staff.



The WEEE symbol is that of the European Union regarding the recycling of electrical and electronic equipment. It indicates that this product contains electrical and electronic components that can be reused, recycled or recovered. Therefore this product should not be disposed of in your regular trash. Thank you to return the unit or contact your authorized dealer for more information.



This symbol alerts the user to the presence of "dangerous voltage" uninsulated which may pose a risk of electric shock to the user.



This symbol alerts the user that the documentation that comes with the device contains important instructions for maintenance and proper use of the product.

Recommendations

In the case of headphones, do not use it to excessive noise. Otherwise, prolonged listening at high volume levels may cause permanent damage to your hearing.

When disposing of used batteries, please comply with governmental regulations or rules defined by the public statements relating to the environment applicable in your country.

Never expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire, etc ...

Product recycling

At the end of its useful life, this product should not be disposed of with regular garbage, but returned to a collection point for the recycling of electrical and electronic components. This point is emphasized by the symbol on the product, the instruction manual and on the packaging.

The materials can be reused in accordance with their markings. Through reuse and recycling of raw materials or any other form of recycling, you make an important contribution to environmental protection. Your municipality can tell you where is the point of the nearest collection site.

Location and precautions

Avoid placing it in direct sunlight or near a heat source. No source of light shall be placed on the apparatus. Also avoid all sources that could cause vibration, dust, cold or moisture. The recommended ambient temperature range is 5-35 ° C.

The device must be installed on a stable, level surface. Do not place the unit on an unstable surface or shelf. The unit may fall, causing serious injury to a child or adult as well as serious damage to the product. Do not place other equipment on top of the unit.

Due to stray, turntables or CRT TVs magnetic fields should not be located near the unit to avoid possible interference.

Power sources

The unit should be operated only from the type of power source indicated on the label. If you are unsure of the type of power available to you, thank you to contact your dealer or the company responsible for the power supply in your area.

Turn off device if you do not intend to use this unit for a long time.

In case of prolonged absence from home, it is recommended to unplug from the electrical outlet.

Make sure each cable is correctly inserted. To prevent hum or background noise, do not mix different other antenna cable with the power cord or speaker wires.

Warranty

BC Acoustics warrants this product parts and labor (under the conditions specified below).

BC Acoustics will repair or replace (at its discretion) this product or any defective parts. The warranty period may vary by country. If in doubt, contact your dealer. Always retain proof of purchase of this product.

For warranty service, please contact the BC Acoustique authorized reseller from which you purchased this product. If your dealer is not itself repair the product, it can be sent to BC Acoustique authorized after-sales service. If necessary, you will need to ship this product in its original packaging or packaging affording an equal degree of protection.

Proof of purchase such as an invoice stating that the product is covered by the Guarantee must be presented for any warranty claims.

This warranty is void if:

- The factory serial number has been altered or removed.
- This product was not purchased from an authorized reseller BC Acoustique. To confirm that the serial number has been altered or that the product was purchased from an authorized reseller BC Acoustique, you can call BC Acoustique BC Acoustique or distributor in your country.
- If the power supply cord or plug is damaged.
- If liquid has been spilled or if objects have fallen inside.
- If the unit has been exposed to rain or water.
- If the unit is dropped or damaged in any way.
- This warranty does not cover cosmetic damage or damage caused by or due to force majeure, an accident, mis use, abuse, negligence, commercial use or modification of part any product.
- This warranty does not cover damage caused by or resulting from misuse, a maintenance or improper installation or repairs made or attempted by anyone other in BC Acoustique or not BC Acoustics dealer or technician approved, authorized to carry out maintenance and repair under warranty for BC Acoustique. Any unauthorized repairs will void this warranty. This warranty does not cover products sold "AS IS".
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER.
- BC Acoustique NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Warranty

- Some countries do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties. Therefore, the limitations or exclusions herein may not apply. This warranty gives you specific legal rights, in addition to other rights which vary from state to state or country to country.

Basic instructions Quick starting guide

Make sure that the device is not plugged into the mains before making any connections. It is also recommended to turn off or disconnect all other devices associated while making connections to the product.

Connect the speakers to the speaker jacks on the back and the sources of the corresponding input jacks on the back.

Connect the power cord to the connector on the one hand AC Mains product and the other to a wall outlet.

Turn the POWER switch (POWER) ON (ON). [page 6, button ⑪ under the amplifier].

If the unit is equipped with a standby, then press the STANDBY button to turn it on.

Press the input selector for the source you want to hear.

Connection to the amplifier

Warning: Be sure to turn off the power switch on your product before making any connections. Similarly it is best to cut the power of the other devices you want to connect to your amplifier.

① & ⑨ LOUDSEPAKER TERMINALS

Connect the speaker to the terminals marked RIGHT "+ R" and "R -" ensuring that "R +" is connected to the "+" terminal of the enclosure and "R -" is connected to the terminal "-" the same enclosure. Connect the LEFT speaker to the terminals marked "L +" and "L -" by doing the same.

Make sure that no wires are not insulated can bypass the speaker outputs. Make sure that the speaker terminals are tight enough to ensure a good electrical connection. If the terminal screws are not tight enough, the sound quality may be affected.

 
Use only dedicated wire to the speaker (a section of 1.5 mm² or more is recommended especially if the cable length is greater than 3m).

Important Note: Check the impedance of your speakers. When using a pair of speakers, you can use speakers with an impedance of between 4 and 8 ohms.

② & ⑧ XLR CONNECTIONS

XLR connections (INPUTS ⑧ or OUTPUTS ②) allow the use of symmetric links. This type of cables guarantees greater immunity to electromagnetic interference screw. Their use is recommended in particular when the distance between the devices is important.

Rear panel

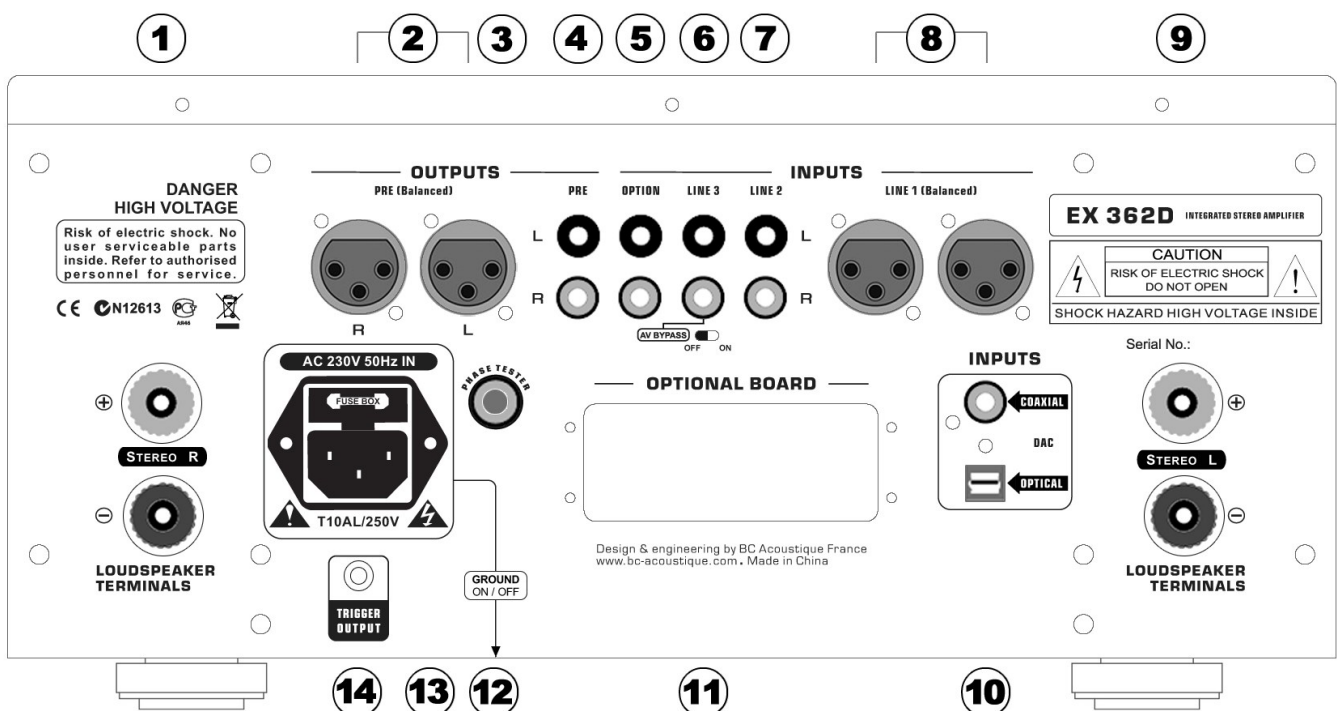

Connection to the amplifier

③ PHASE TESTER

The EX Series products feature 3-pins mains power cord. These 3-pins plugs are respectively the Ground, which is located in the center of the outlet, the Neutral, it is an electrical reference, and finally the Hot. The latter is that which "handles" the alternating voltage.

According to the wiring of the multi-socket and a sense of connection to the outlet, the respective position of the Neutral and Hot out will change, according to this position a residual voltage may appear on the cabinet of the device. This tension can affect the result of listening to your hi-fi system.

In order to choose the most appropriate direction connection (one that will induce the lowest residual voltage on the cabinet), some EX Series products have a Test device at the rear panel of the product named: "Test Phase".

To test it is necessary to connect the device to the mains, and then use your finger to touch the metal ring located around the central lamp.

If the lamp lights it means that the residual voltage of the cabinet is high. You will therefore then reverse the connection of the outlet of the device (careful, the light intensity is low).

If the light remains off when you touch the ring around the central lamp, it means that the device is connected in the best way.

Notes:

- To choose the direction of the outlet connection it is necessary to have a Schuko socket because the Ground is offset on the sides.



Schuko plug

- When the test is performed by touching the ring, make sure not to touch any other part of the product which would have the effect of putting to pair and thus invalidate the test.

④ PRE OUT (RCA OUTPUT)

This output allows you to use the amplifier as a preamplifier and Therefore connect a power amplifier to upgrade the system.

⑤ OPTION (RCA INPUT)

Without Optional card, this input works as a 4th LINE input. If you use an Optional Card, this RCA input will be disabled in favor, for example, of the optional Bluetooth card allowing you to listen to your music from your Smartphone. In that case, when you are selecting the Option's source button (in front panel), you can listen to music from your Bluetooth device.

⑥ LINE 3 (RCA INPUT)

The LINE 3 input is for connecting a "line level" source. This input has an option "AV BYPASS" - [See # 10 in this manual for more information].

AV BYPASS (ON/OFF) - COAXIAL and OPTICAL INPUTS

The LINE 3 input has an option "AV BYPASS" which takes you through the amplifier without using amplification part. This is very useful if you wants, for example, connect your speakers directly on another AV amplifier output.

⑦ INPUT LINE 2 (RCA INPUT)

The LINE 2 input is for connecting a "line level" source to your amplifier. It is designed to receive an "analog" signal (as opposed to "digital" signal). To connect your source we are using a traditional "RCA" cable, they are usually identified by a color code "RED" to the RIGHT and "WHITE" to the LEFT channel.

Connecting a turntable: Most turntables have output format "RCA" but the signal is not compatible with the "line inputs" amplifiers. To use turntable, it is necessary to use a "phono preamp" compatible with a "reader cell phono". There are 2 families of cells, MM (Moving Magnet) or MC (Moving Coil). The most used cells among the public are in MM format.

⑩ DAC - COAXIAL and OPTICAL INPUTS

This button is activating alternately the digital inputs RCA and Optical on the rear of the amplifier. It allows listening to digital sources connected to the amplifier with the integrated Digital to Analog Converter (DAC) compatible with all PCM stereo formats (up to 48 kHz).

Note: You can leave connect two sources, one on the Optical input (LED is red), and the other on the Coaxial input (LED is white) and activate the one that suits you by repeatedly pressing the DAC button on the front panel.

 
⑪ OPTIONAL BOARD CARD

This slot allows you to add, when you want, one of the Optional cards for adding one more source, like a digital card that lets you listen to music from a computer.

Connection to the amplifier

⑫ SWITCH ANTI-HUM (GROUND ON / OFF)

Located under the amplifier



Your amplifier EX-362D has a mains socket outlet with a ground connection. The use of this type of connection is recommended for electrical safety reasons (including wetlands).

However sometimes this connection "mass" is the origin of "hum" audible from the speakers in a hi-fi system to solve this problem, the cancellation of the ground connection is sometimes sufficient. To do this you have, under the amplifier, a switch to choose to connect or not the mass of the device to the mains.

⑬ TRIGGER OUTPUT

This 3.5 mm Jack mono output is used to activate or deactivate remotely auxiliary devices connected to the amplifier. When the unit is turned on, the output is switched to 12V. When the unit is turned off, the trigger output is 0V.

⑭ AC MAIN INPUT

Once all connections to the amplifier, plug the power cable into an outlet and turn the unit on. Your amplifier is now ready for use.

Connections and uses

This taken Jack size 6.35 mm allows connection of stereo headphones. It is advisable to use a listener with an impedance between 32 and 600 ohm headphones. When the headset is connected, the output to the speakers are then cut.

When the headphone jack is used, the speaker outputs are disabled. Similarly, the bias setting of the power stages is reduced to a much lower than that used to power speakers level. This reduces the consumption based on actual needs of your listening.

 
② STANDBY ON (SLEEP MODE)

This button allows you to turn the device in Sleep mode to conserve energy while not performing his primary function or to resume the device in active mode.

Regarding the high level of heat dissipation of the device including the absence of any musical signal (operating in pure Class-A), we recommend that you turn the EX-362D in mode Standby when not in use.

In any event, for security reasons the EX-362D is programmed to automatically go into standby after 12 hours of operation (with or without the presence of musical signal). If the EX-362D gets itself into Standby when listening, you always have the option to return to operation with the Stand-By button.

Front panel

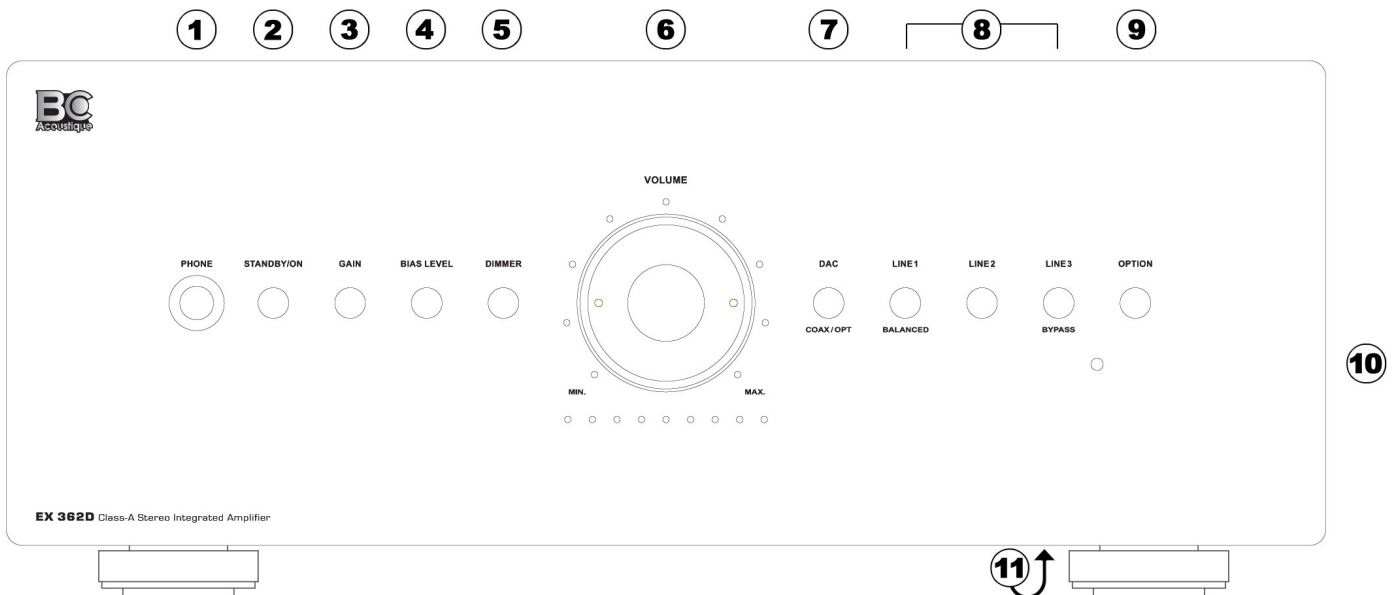

① PHONE / HEADPHONES

Important note: Make sure the volume control is turned down before connecting or disconnecting headphones. Listening at high levels can cause permanent hearing damage.

③ GAIN

This command allows you to lower the overall gain (-10dB) on all of your sources. This allows you to adjust the fineness of the volume adjustment depending on the sensitivity of your speakers and your listening level.

Connections and uses

④ BIAS LEVEL

This button allows you to adjust the bias control power stages of EX362D. When the light is off around the BIAS LEVEL knob, the EX362D works in pure Class-A up to 50% of its maximum power.

Beyond, the EX362D works in Class-AB. When the button is activated (and therefore light), the polarization of the power stages is at its maximum level, the EX-362D operates in pure Class-A to its maximum level.

Note: The operation in Class-A pure power stages induces significant heat dissipation and therefore high temperature from the external radiators.

Accordingly, in case of prolonged amplifier moderate use, we recommend using the intermediate level of polarization (the light above the button will turn off). This will effectively prevent significant heat dissipation unnecessary.

⑤ DIMMER

This button allows you to vary the intensity of bright Leds volume control.

⑥ VOLUME

This knob adjusts the output volume of the amplifier at the speaker outputs.

SOURCE SELECTOR

These buttons select the active input of the amplifier and the signal sent to the speakers, to headphones and Preamp output and REC LINE. The buttons on the remote control are identical to those buttons. Once the selected button, the integrated LED corresponding entry under the particular input button will turn white.

⑦ DAC - OPTIC & COAXIAL INPUTS

This button activates the digital input on the back of the amplifier. It allows listening to the digital source connected to the amplifier with the integrated digital-to-analog converter.

Note: You can leave connect two sources (one on the Optical input, and the other on the Coaxial input) and activate the one that suits you the best by pressing the DAC button.

⑧ LINE 1 & LINE 2 (INPUTS)

These buttons are used to select sources present on XLR (balanced) and RCA inputs (line level) with the same name located on the rear panel of the amplifier.

LINE 3 (INPUT) / BYPASS

This button selects the source present on the RCA inputs (line level) of the same name located on the rear panel of the amplifier. This input has a switch (on the rear panel) to override the functions of Gain and Tone. It is usually used to connect it to the part of an AV amplifier preamp.

⑨ OPTION

Without Optional card: This button selects the listening to a 4th source you have connected to the RCA OPTION connectors (rear panel).

With Optional card: This button allows you to select the source to play on your option card. (See notice of the said optioncard).

Example of option card: Bluetooth card allows you to listen to your music from your Smartphone.

⑩ IR SENSOR

This window receives IR commands (Infra Red) from the remote control. It is essential that there is no obstacle between the remote control and the sensor.

⑪ ON / OFF BUTTON

This switch allows shutdown or operation of the amplifier.

 
Note: 4 rubber blocs are provided in order to raise the unit, to re-adjust the spacing between two products, providing better ventilation, reducing vibration and to allowing better access to the On / Off switch located under the front panel.

Remote control

The amplifier EX-362D comes with an RC-EX2v2 remote control. It was designed to be both compatible with your amplifier but also the possible devices BC Acoustique (including CD players EX Series) range.

Note on the battery: Remove the transparent protective tab to activate the battery.

- ① POWER: This button allows you to pause or resume from standby different electronic devices BC Acoustique with this feature.
- ② INFO: The display panel on the product provides information on the CD.
- ③ RANDOM: Play a random track on CD player
- ④ 1...9.0: Keypad / Track selection
- ⑤ A-B
- ⑥ PAVE CONTOL : REV / STOP / FWD / PREV PAUSE/PLAY / NEXT
- ⑦ TIME
- ⑧ CD/USB
- ⑨ SOURCES: LINE 1 - LINE 2 - LINE 3 - DAC - OPTION
- ⑩ OPTION: Selects the source from your 5th option card. If there is no option card, it will serve as input LINE 4.
- ⑪ GAIN: This command allows you to lower the overall gain (-10dB) on all your sources to adjust the fineness of the volume.
- ⑫ REPEAT
- ⑬ VOL+ / VOL-
- ⑭ STOP: Stop the Repeat function
- ⑮ PROG

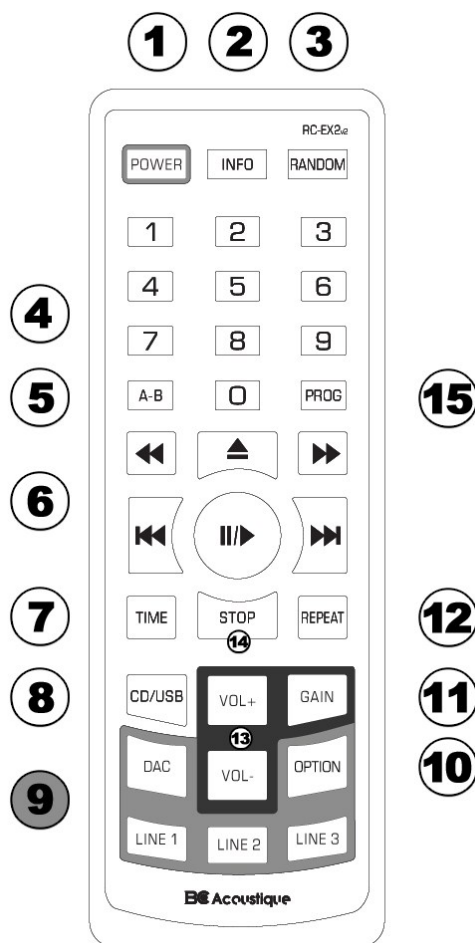

Specifications

Preamplifier section

Line level input XLR (LINE 1)

Sensitivity: 600 mV / Impedance: 47 k Ω

Line level input RCA (LINE 2, LINE 3)

Sensitivity: 600 mV / Impedance: 47 k Ω

Amplifier section

Continuous average power 2x80W into 8 Ω
and 2x155W into 4 Ω

Distortion \leq 0,004% (1kHz, 1W)

Signal/Noise ration \geq 91dBA

Bandwidth: 20Hz-20kHz

Input Impedance: 47 k Ω

Output Impedance: 4-8 Ω

Connectors

1x XLR line stereo input (LINE 1)

2x RCA line stereo input (LINE 2 and LINE 3)

1x Digital inputs: 1x Optical & 1x Coaxial (DAT)

1x OPTIONAL CARD Input (OPTION or LINE 4)

1x Pré-out RCA and XLR stereo outputs

1x Trigger output (Jack 3,5mm mono)

1x Headphone output (jack 6,35 mm) front panel

Speaker terminals screw-compatible banana plugs

General

Detachable power cable

UNIT

Dimensions (W×H×D): 460x180x464.1 mm / Weight: 27 kg

BOX

Dimensions (W×H×D): 580x295x605 mm / Weight: 30 kg

Volume: 0.10 m³

EAN CODES

EX362D Black: 0820103857147

EX362D Silver: 0820103857154

Troubleshooting

Here you will find a number of fault description and possible solutions we invite you to read in order to ensure the possibility of an actual breakdown of your device.

The unit does not turn on.

- Make sure the power cord is properly connected.
- Make sure the plug is fully inserted into the wall outlet and there is power.
- Make sure the camera is turned on.
- Check the fuse in the mains plug or adapter if necessary.

Troubleshooting

There is no sound

- Make sure the unit is not in standby mode.
- Check that the source component is connected properly.
- Make sure your speakers are properly connected.

One channel no sound

- Make sure the balance control is in the correct position.
- Check the speaker connections.
- Check interconnects.

A loud humming or buzzing is noticeable

- Check turntable or tonearm to capture an ground fault or a faulty connection.
- Make sure that interconnect cable is loose or defective.
- Make sure your tape deck or turntable is not too close to the amplifier.

The bass is weak or the stereo image is diffuse

Make sure the speakers are not in phase.

The sound is distorted

Make sure that the control settings of volume or tone is not too high.

The remote control does not work

- Check that the batteries have not expired.
- Make sure nothing is blocking the remote sensor.

In case the above solutions do not remedy your problem, check our FAQ section (Frequently Asked Questions) on our website: www.bc-acoustique.com

For repair, during or after the warranty, please contact your dealer.

To obtain warranty service and technical support, thank you kindly to register your product online on the website www.bc-acoustique.com at the product registration section.




BC ACOUSTIQUE

BP 306

94709 Maisons-Alfort Cedex France

www.bc-acoustique.com

 Notes

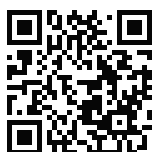

BC ACOUSTIQUE
BP 306
94709 Maisons-Alfort Cedex France
www.bc-acoustique.com